

 
REMOTE CONTROL



Before proceeding with the operation of your new Rinnai Portable Room Air Conditioner Remote Controller, please read these instructions thoroughly and gain a full understanding of the requirements features and operation of your new Remote Controller.

REMOTE CONTROL OVERVIEW

- | | | | |
|--|------------------------------|--|-------------------------------|
| | ON/OFF Button | | Fan Speed Button |
| | Increase button | | Mode button |
| | Decrease button | | Swing button |
| | Timer button | | Sleep button |
| | Unit switch button | | Turbo button (Not Applicable) |
| | COOL symbol | | SLEEP symbol |
| | DRY symbol | | Timer ON symbol |
| | FAN symbol | | Timer OFF symbol |
| | HEAT symbol (Not Applicable) | | Fan speed symbol |
| | SMART symbol | | Turbo symbol (Not Applicable) |
| | SWING symbol | | Child lock symbol |

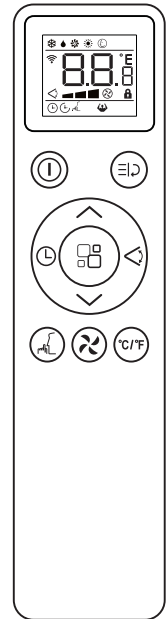


BASIC OPERATION REMOTE CONTROLLER

The Rinnai Remote Controller allows for convenient operation of the appliance within a 7 metre range.



 A confirmation beep sounds to confirm that a successful controller input has been received by the appliance.

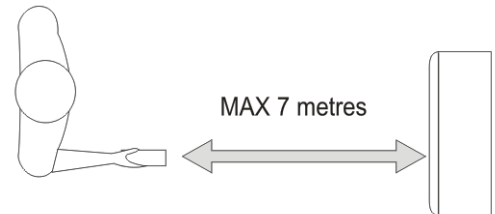

BUTTON DESCRIPTIONS & OPERATION

- "ON/OFF" Button
Press "ON/OFF" button to turn "ON" or "OFF" the Air Conditioner.
- "FAN SPEED" Button
Press "FAN SPEED" to set the fan speed (LOW, MEDIUM, HIGH or AUTO).
- "^" and "v" Button to adjust temperature or time
Press "^" and "v" to regulate the temperature (the unit is 1°C) and set the time (the unit is 0.5h). The temperature ranges from 18° to 32°, and the time ranges from 0.5h to 24h.
- "MODE" selection button
Selects the operation mode: COOL, FAN, DRY and SMART (Auto).



SMART (Auto)

This mode operates on Fan mode when the room temperature is below 23°C; and operates on Cool mode when the room temperature is above 23°C.

Display on the control panel:



5. "SWING" Button
Press "SWING" button to turn "ON" or "OFF" the swing function.
6. "TIMER" Button

Delay on Timer

- With the appliance "OFF", press the "TIMER" button twice, digits and a blinking "⌚" and "h" are shown on the LCD screen.
- Press ^ or v to set the desired time period (the available time range is in 1/2 hour increments from 0.5 to 24 hours).
- Press the "TIMER" button again to lock in the setting.

Delay off Timer

- With the appliance "ON", press the "TIMER" button once, digits and a blinking "⌚" and "h" are shown on the LCD screen.
- Press ^ or v set the desired time period (the available time range is in 1/2 hour increments from 0.5 to 24 hours).
- Press the "TIMER" button again to lock in the setting.
When a timer is set, pressing the "TIMER" button (7) will cancel any timer settings.

7. "SLEEP" Button

The SLEEP function allows the set temperature to increase and decrease over an 8 hour period at pre-set time intervals to maintain your comfort while saving energy.

- (a) In operating mode, press "SLEEP" to enter the 8-hour intelligent sleep mode. After 8 hours, the air conditioner will be off.
- (b) the fan speed is low when sleep mode.
- (c) In sleep mode, press "SLEEP" again to exit the sleep mode.



Sleep mode is not available in DRY and FAN only mode.

8. °C/°F button
Press this button to switch temperature unit.
9. Turbo button
Not applicable for this mode.
10. Child lock
Press ^ or v button simultaneously for 3 seconds to active he child-lock function.

REMOTE CONTROL BATTERIES

Insert batteries before using the remote control. The battery type used is AAA (1.5 V).

1. Remove the battery cover at the rear of the remote control.
2. Insert the new batteries and make sure that the + and - terminals of the batteries are installed correctly.
3. Reattach the battery cover.



If the LCD screen of the remote control starts to fade or fails to transmit, replace the batteries.